




Armrest Installation Instructions

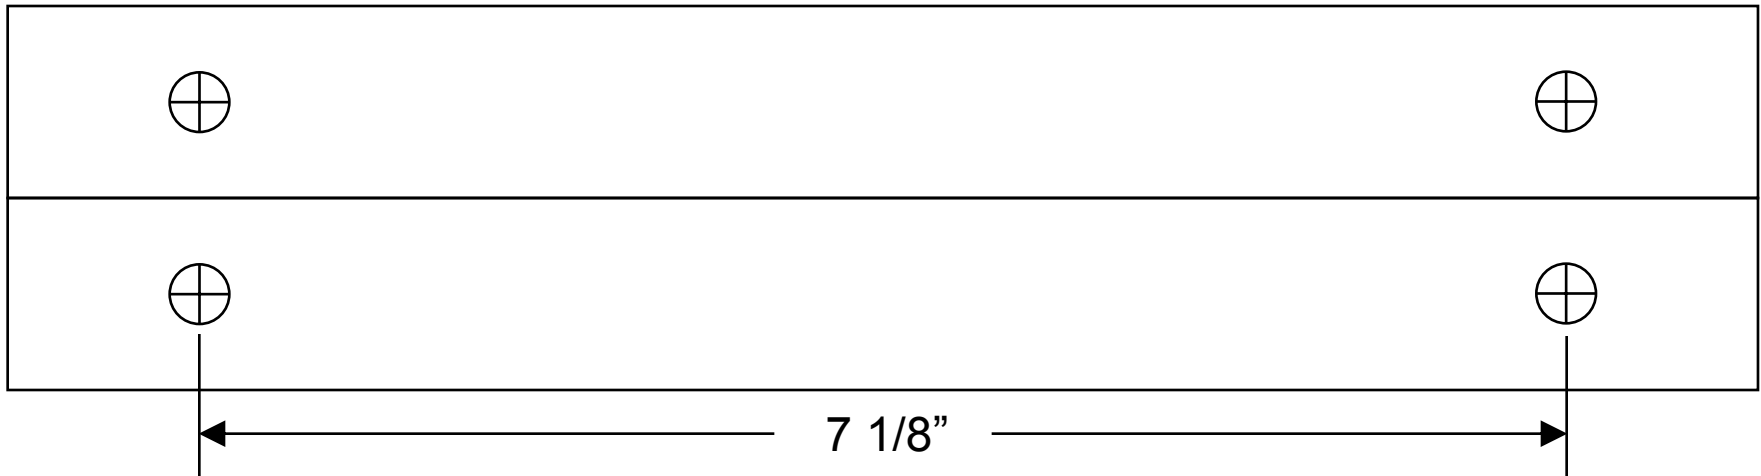

If printing template, be sure to print at full scale.
Double check measurement shown above.
Cut out hole templates.
Place templates on rear seat kit side bars,
making sure that templates are centered side to
side on bar.
Front to back placement is by personal
preference.
Mark and drill holes using 5/16" drill bit.
Mount armrests using provided hardware.